



Made and published by the Director General of the Ordnance Survey, Southampton

The first step is important to specify the number of the plan on which it falls, or features joined for measurement of area
 The number within individual parcels are also shown
 To convert hectares to acres multiply by 2.474105
 To convert acres to hectares multiply by 0.40469

NATIONAL GRID REFERENCE
 The point of the National Grid and are at 100 metre intervals. To give a unique reference to a point within 10 metres proceed as follows.....

The first two letters preceding these number
 are the grid square which the point lies on
 and figure these line on the north or south margin
 of metres from the grid to the point
 and figure this number is the Easting
 The next two figures of the grid square
 and figure these line on the east or west margin
 of metres from the grid to the point
 and figure this number is the Northing
 The last two figures in given in the letters
 and figure these line on the Northings
 and the Southings

EXAMPLE FROM SHEET: TQ 0529
 TQ 0529
 258
 058
 058
 291
 058
 059
 TQ 0582916
 058
 059

See also "An Introduction to the Projection for Ordnance Survey Maps and the
 Survey of the Great Britain"

The alignment of tunnels where shown is approximate.

The resulting four figure number is the Northing..... 2916 2914 058

4. The full ten metre reference is given by writing first the letters, followed by the Easting and then by the Northing..... TQ 05882916.

National Reference System.'

1 F 1023-1723