

PARCEL NUMBERS AND ACREAGES
The number and acreage of each parcel of land is shown within the parcel. It is important when identifying a parcel to specify the number(s) of the plan(s) on which it falls.
IN PARCELS DIVIDED BY THE SHEET EDGE, THE ACREAGES ARE SHOWN TO SHEET EDGE ONLY.

Revised March 1967
Levelled 1965

ORDNANCE SURVEY

Scale: 1:25,000 or 1 inch to 1 mile

Revised March 1967
Levelled 1965

The West half of this sheet is Plan TF 2825
The East half of this sheet is Plan TF 2925



Made and published by the Director General of the Ordnance Survey, Southampton, 1965.
Reconstituted from former County Series plans and revised 1965.

Conversion Scale Acres-Hectares
Acres 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
Hectares 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30

NATIONAL GRID REFERENCE

The lines on the plan form part of the National Grid and are spaced at 100 metre intervals.
To give a large scale reference defining the position of a point to the nearest 10 metres proceed as follows:-
EXAMPLE: C in Church Farm

EASTING	NORTHING
Take west edge of square in which point lies and read the figures opposite this line on NORTH and SOUTH margins	Take south edge of square in which point lies and read the figures opposite this line on EAST and WEST margins
Estimate tens of metres from the grid line	Estimate tens of metres from the grid line
291	252

TEN METRE REFERENCE: TF2932523

For further information see "The Projection for Ordnance Survey Maps and Plans and the National Reference System".
The representation on this plan of a road, track or path is no evidence of the existence of a right of way.
1 square inch on this plan represents 100 ft on the ground.
The statement of remarks where shown is approximate.

Bear House.....BH	Letter Box.....LB	Revision Point.....RP
Bench Mark.....BM	Level Crossing.....LC	Signal Box, or Post.....SB, SP
Boundary Post.....BP	Loading Gauge.....LG	Signal Bridge.....SB
Boundary Stone.....BS	Mail Pick-up.....MPU	Springs.....Spr
Capstan, Crane.....Cn, C	Mile, or Mooring Post.....MP	Stone.....St
Drinking Fountain.....DF	Mile Stone.....MS	Sundial.....SD
Electricity Pillar or Post.....EP	Pillar, Pole or Post.....P	Tank or Tank.....TK
Electricity Transmission Line.....ETL	Police Call Box.....PCB	Telephone Call Box.....TCB
Fire Alarm Pillar.....FAP	Police Telephone Pillar.....PTP	Traverse Station.....TS
Flagstaff.....FS	Post Office.....PO	Water Point, or Tap.....Wp, Wp, T
Foot Bridge.....FB	Public Convenience.....PC	Weightbridge.....WB
Fundamental Bench Mark.....FBM	Public House.....PH	Well.....W
Guide Post.....GP	Pump.....Pp	Wind Pump.....Wp
Mean High or Low Water.....MHW or MLW	Mean High or Low Water Springs.....MHS or MLWS	

PARCEL NUMBERS AND ACREAGES
The number and acreage of each parcel of land is shown within the parcel. It is important when identifying a parcel to specify the number(s) of the plan(s) on which it falls.
IN PARCELS DIVIDED BY THE SHEET EDGE, THE ACREAGES ARE SHOWN TO SHEET EDGE ONLY.
To convert acres to hectares multiply by 0.404688
To convert hectares to acres multiply by 2.471054