PLAN TF 2424 & PLAN TF 2524

PARCEL NUMBERS AND ACREAGES

The number and acreage of each parcel of land is shown within the parcel. It is important when identifying a parcel to specify the number(s) of the plan(s) on which it falls.

IN PARCELS DIVIDED BY THE SHEET EDGE, THE ACREAGES ARE SHOWN TO SHEET EDGE ONLY.

ORDNANCE SURVEY

Scale: 1:2500 or 25·344 inches to 1 mile

Revised.....August 1967
Levelled.....1956,65

Revised.....August 1967
Levelled.....1965

The West half of this sheet is Plan TF 2424
The East half of this sheet is Plan TF 2524

PLAN TF 2424 & PLAN TF 2524

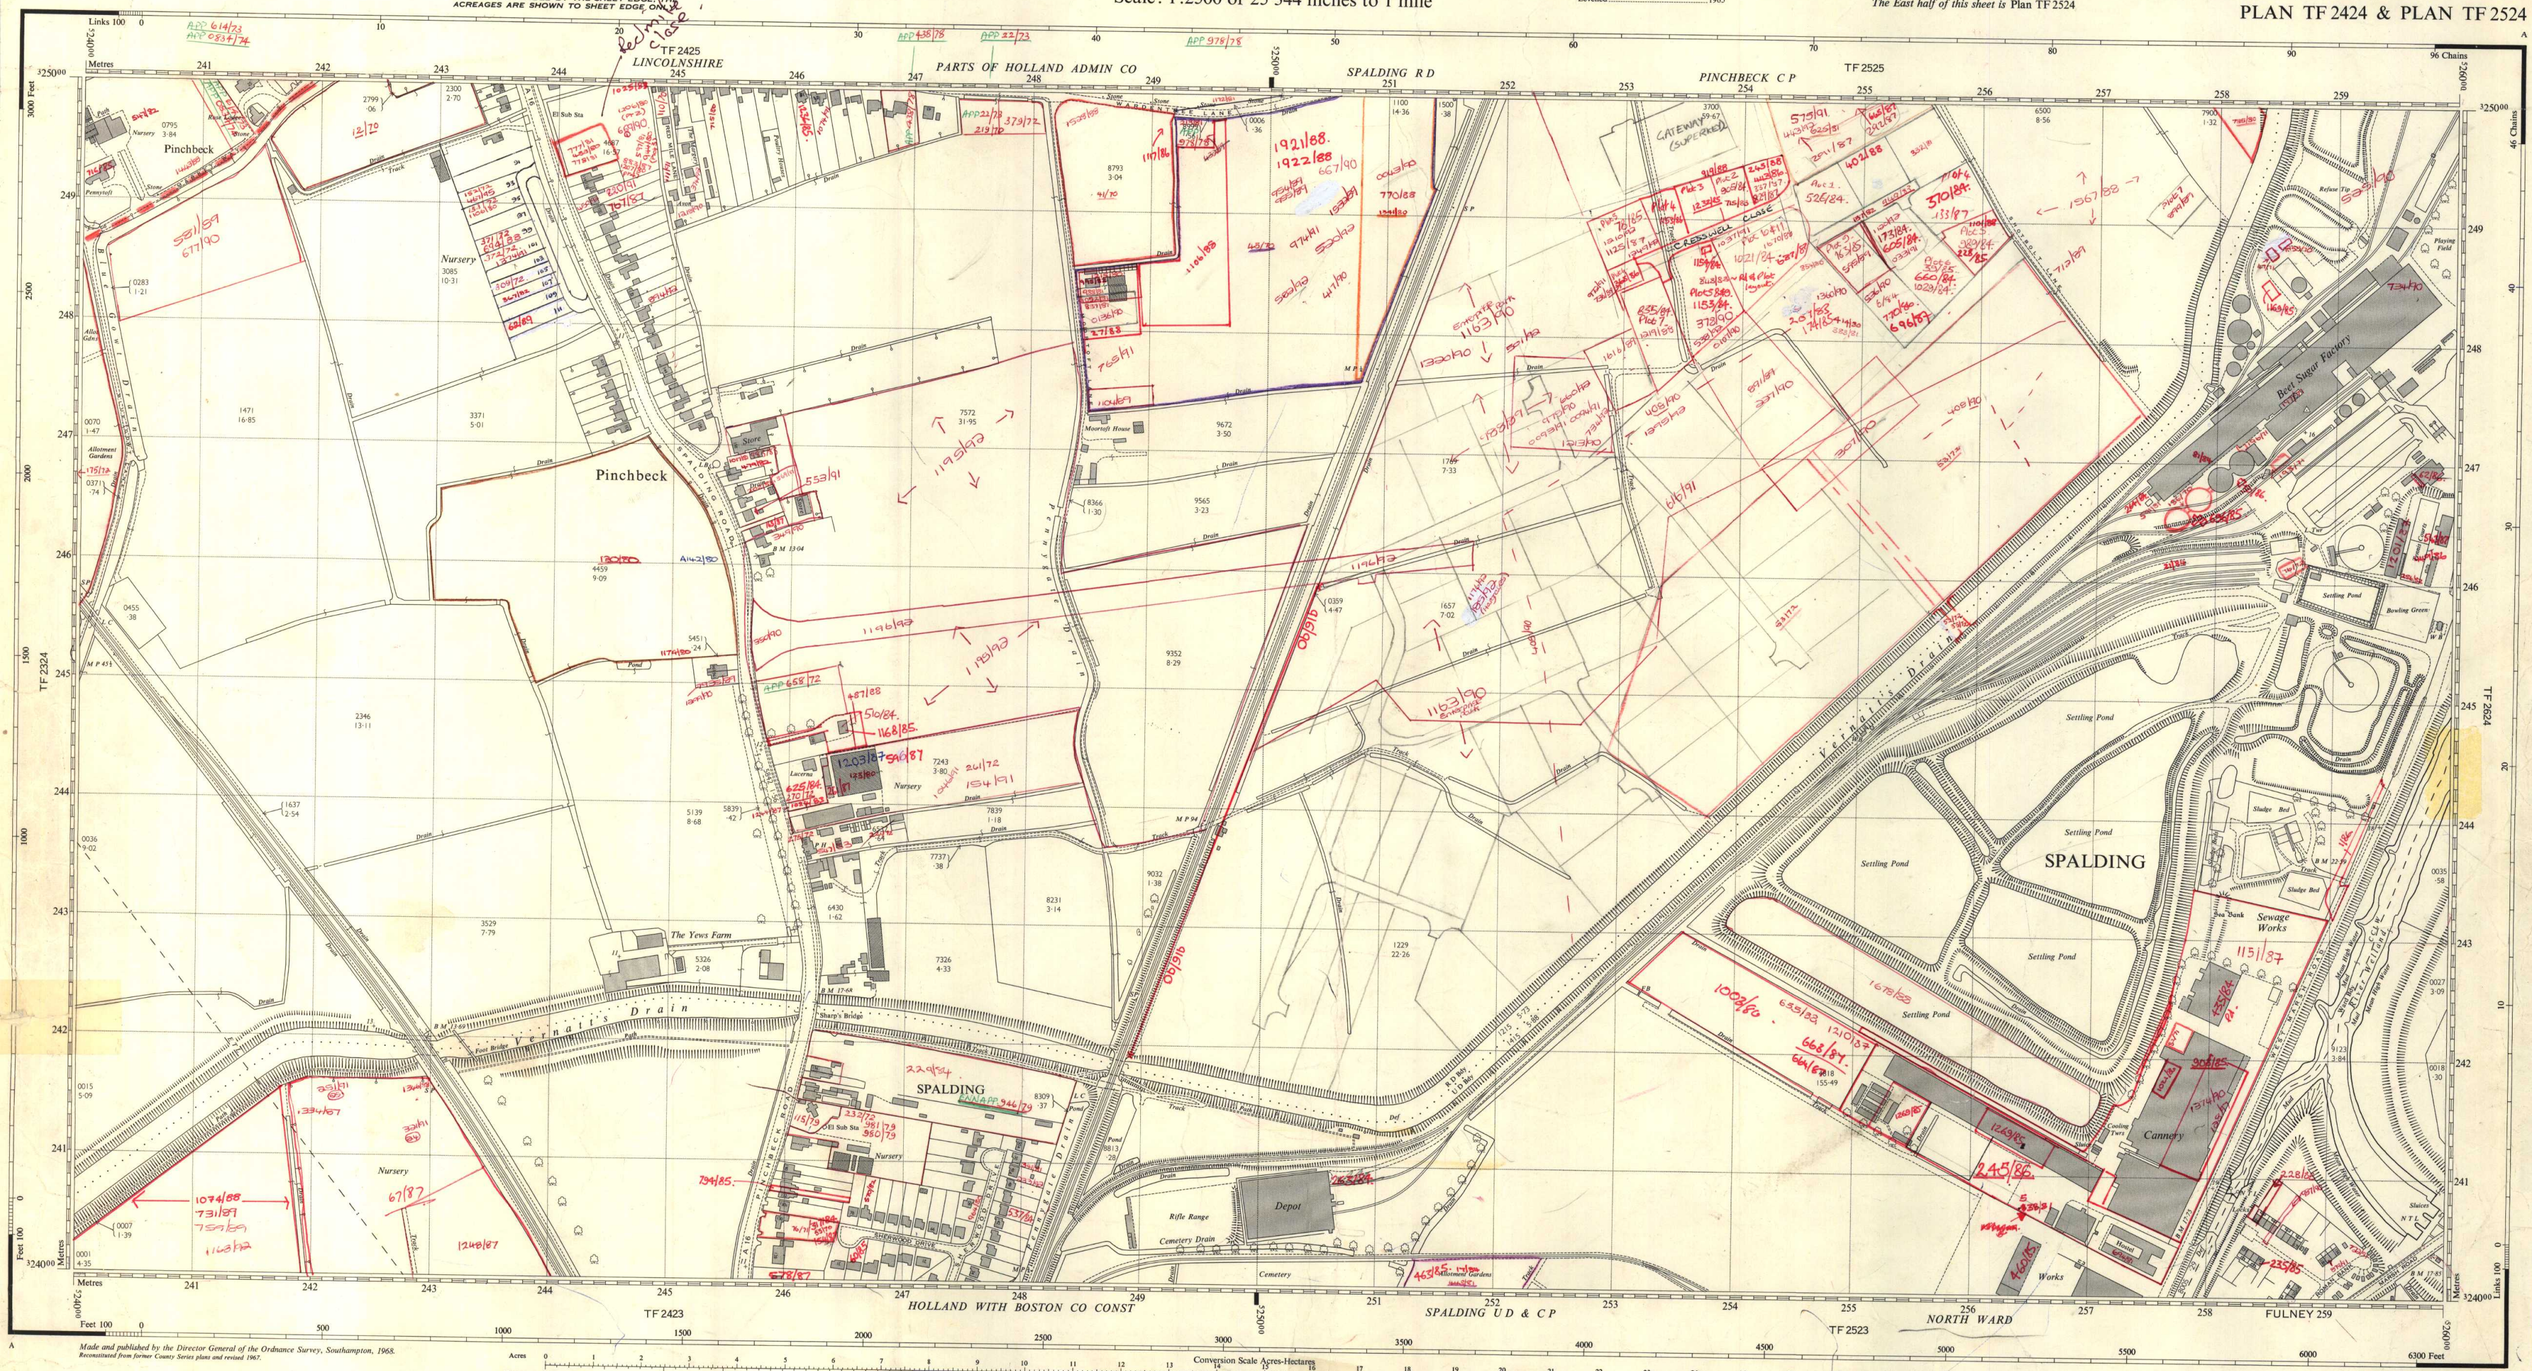

Made and published by the Director General of the Ordnance Survey, Southampton, 1968.
Reconstituted from former County Series plans and revised 1967.

Conversion Scale Acres-Hectares

© Crown Copyright 1968.

VEGETATION CLASSIFICATION. Where space permits, tree and scrub symbols in woods are shown in groups of Four, Three, Two or One to indicate Close, Medium, Open or Scattered density of trees or scrub.

Antiquities ..... *(site of)*
Change of boundary meering .....
Limit of area within which the acreages of individual parcels are not shown .....

Bench Mark .....
" " Fundamental .....
Parcels joined for acreages .....

Surface Level .....
Revision Point or Traverse Station .....
Triangulation Station .....

Levelling Information

Altitudes of Bench Marks and Surface Levels are given in feet above the Newlyn Datum.
Bench Mark lists, containing fuller and possibly later levelling information, are obtainable from the Director General, Ordnance Survey.

Boundary Mereing Abbreviations

Base of Bank	*BB*	Centre of Old Course of Stream	*COCS*
Centre of Bank	*CB*	Centre of Road, etc	*CR*
Centre of Canal, etc	*CC*	Centre of Stream	*CS*
Centre of Drain, etc	*CD*	4 feet from Root of Hedge	*4ft RH*
Centre of Covered Stream	*CCS*	Face of Fence	*FF*
Face of Wall, etc	*FW*	Side of River, etc	*SR*
Foot of River, etc	*FR*	Top of Bank	*TB*
Foot Bridge	*FB*	Track of Hedge	*Tk H*
Fundamental Bench Mark	*FBM*	Track of Stream	*Tk S*
Guide Post	*GP*	Defaced, Undefined	*Def, Und*

REFERENCE

For fuller information see Reference Card published separately.

NATIONAL GRID REFERENCE

The lines on the plan form part of the National Grid and are spaced at 100 metre intervals.
To give a large scale reference defining the position of a point to the nearest 10 metres proceed as follows :—

EXAMPLE : No 66 SHERWOOD DRIVE

EASTING	NORTHING	
Take west edge of square in which point lies and read the figures opposite this line on NORTH and SOUTH margins	*Take south edge of square in which point lies and read the figures opposite this line on EAST and WEST margins*	
Estimate tens of metres from the grid line	*Estimate tens of metres from the grid line*	
247	240	240
2472	4	2404

TEN METRE REFERENCE : TF 24722404

For further information see "The Projection for Ordnance Survey Maps and Plans and the National Reference System."

The representation on this plan of a road, track or path is no evidence of the existence or of a right of way.
1 square inch on this plan represents ·996 of an acre on the ground.
The alignment of tunnels where shown is approximate.

Beer House	*BH*	Letter Box	*LB*	Revision Point	*rp*
Bench Mark	*BM*	Level Crossing	*LC*	Signal Box, or Post	*SB, SP*
Boundary Post	*BP*	Loading Gauge	*LG*	Signal Bridge	*S Br*
Boundary Stone	*BS*	Mail Pick-up	*MPU*	Spring	*Spr*
Capstan, Crane	*Cn, C*	Mile, or Mooring Post	*MP*	Stone	*S*
Drinking Fountain	*DFn*	Mile Stone	*MS*	Sundial	*SD*
Electricity Pillar or Post	*EP*	Pillar, Pole or Post	*P*	Tank or Track	*Tk*
Electricity Transmission Line	*ETL*	Police Call Box	*PCB*	Telephone Call Box	*TCB*
Fire Alarm Pillar	*FAP*	Police Telephone Pillar	*PTP*	Traverse Station	*tr*
Flagstaff	*FS*	Post Office	*PO*	Water Point, or Tap	*Wr Pt, Wr T*
Foot Bridge	*FB*	Public Convenience	*PC*	Weighbridge	*Wb*
Fundamental Bench Mark	*FBM*	Public House	*PH*	Well	*W*
Guide Post	*GP*	Pump	*Pp*	Wind Pump	*Wd Pp*
Mean High or Low Water	*MHW or MLW*	Mean High or Low Water Springs	*MHWS or MLWS*

PARCEL NUMBERS AND ACREAGES

The number and acreage of each parcel of land is shown within the parcel. It is important when identifying a parcel to specify the number(s) of the plan(s) on which it falls.

IN PARCELS DIVIDED BY THE SHEET EDGE, THE ACREAGES ARE SHOWN TO SHEET EDGE ONLY.

To convert acres to hectares multiply by 0·40468
To convert hectares to acres multiply by 2·47104

PLAN TF 2424 & PLAN TF 2524

PLAN TF 2424 & PLAN TF 2524

[66] For price see current price list.