


PARCEL NUMBERS AND ACREAGES
The number and acreage of each parcel of land is shown within the parcel. It is important when identifying a parcel to specify the number(s) of the plan(s) on which it falls.
IN PARCELS DIVIDED BY THE SHEET EDGE, THE ACREAGES ARE SHOWN TO SHEET EDGE ONLY.

Revised September 1967
Levelled 1965

ORDNANCE SURVEY Scale: 1:2500 or 25-344 inches to 1 mile

Revised September 1967
Levelled 1965

The West half of this sheet is Plan TF 2224
The East half of this sheet is Plan TF 2324

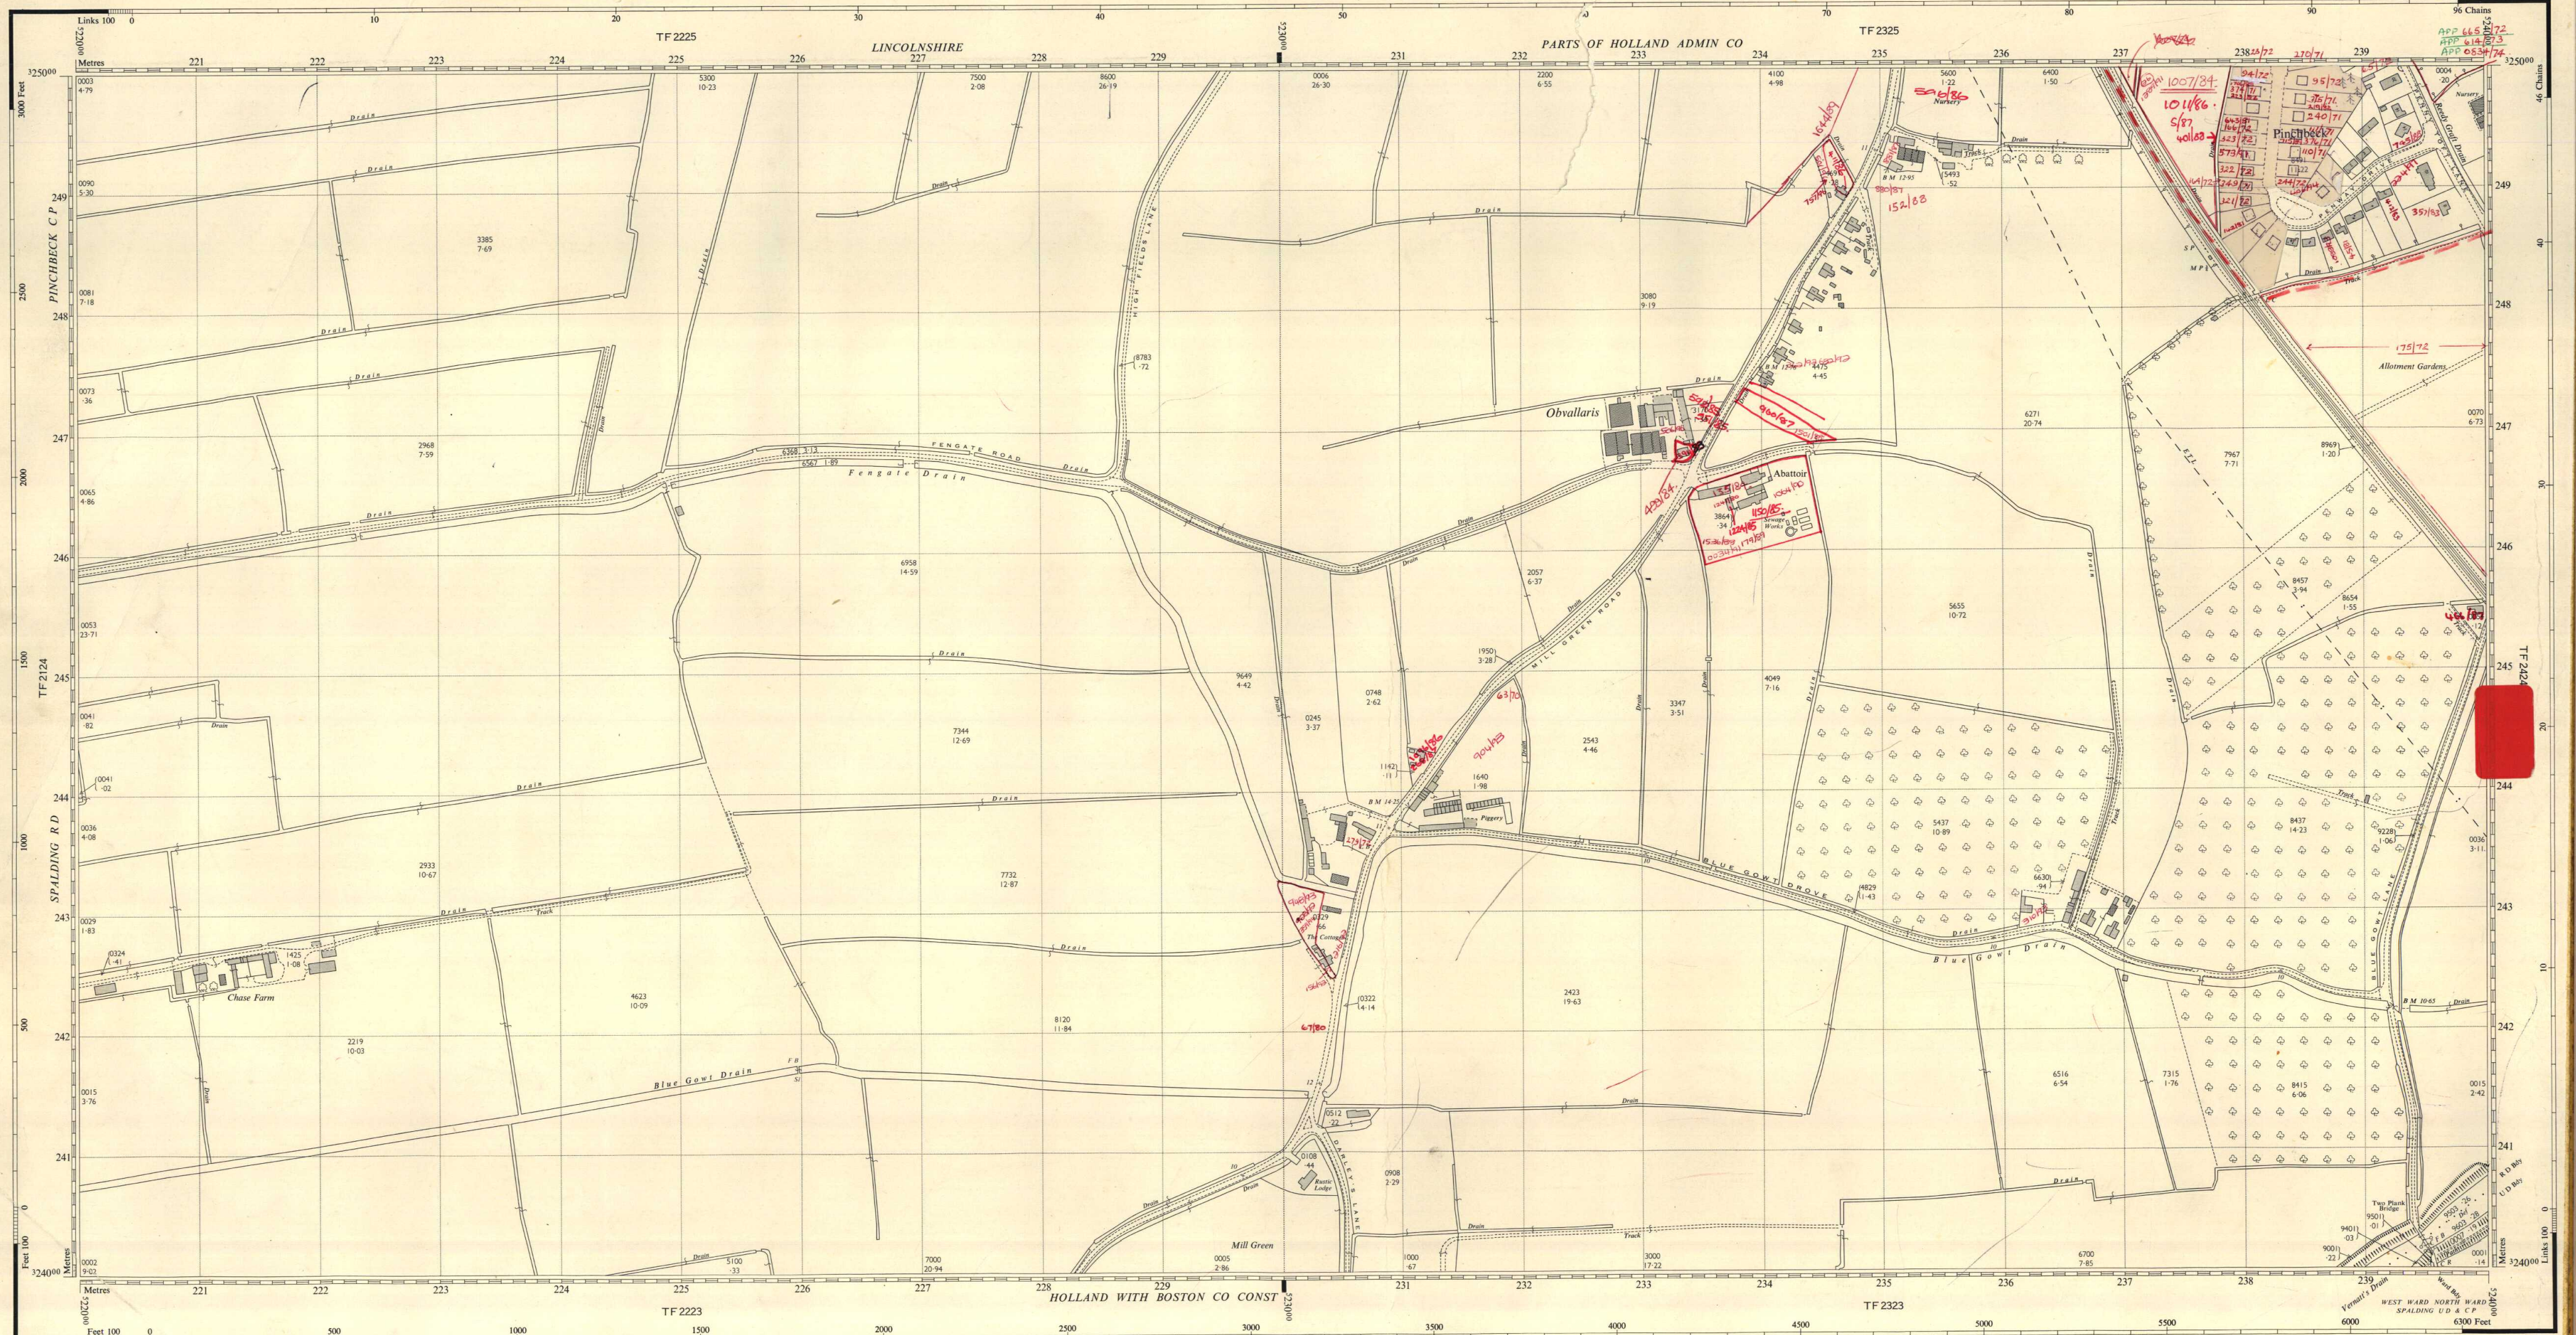

Made and published by the Director General of the Ordnance Survey, Southampton, 1969.
Reconstituted from former County Series plans and revised 1967.

Acres 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
Hectares 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
Conversion Scale Acres-Hectares
For further information see Reference Card published separately.

REFERENCE NATIONAL GRID REFERENCE

The lines on the plan form part of the National Grid and are spaced at 100 metre intervals.
To give a large scale reference defining the position of a point to the nearest 10 metres proceed as follows—
EXAMPLE: O in Obvallaris

EASTING	NORTHING
Take west edge of square in which point lies and read the figures opposite this line on NORTH and SOUTH margins	Take south edge of square in which point lies and read the figures opposite this line on EAST and WEST margins
Estimate tens of metres from the grid line	Estimate tens of metres from the grid line
232	247
2	1
2322	2471

TEN METRE REFERENCE: TF 23222471
For further information see "The Projection for Ordnance Survey Maps and Plans and the National Reference System".
The representation on this plan of a road, track or path is an evidence of the existence of a right of way.
A square inch on this plan represents 1/2500 of an acre on the ground.
The alignment of roads where shown is approximate.

Beer House	BH	Letter Box	LB	Revision Point	RP
Bench Mark	BM	Level Crossing	LC	Signal Box, or Post	SB, SP
Boundary Post	BP	Loading Gauge	LG	Signal Bridge	SB
Boundary Stone	BS	Mail Pick-up	MPU	Spring	SP
Capstan, Crane	CC, C	Mile, or Mooring Post	MP	Stone	ST
Drinking Fountain	DF	Mile Stone	MS	Sundial	SD
Electricity Pillar or Post	EP	Police Call Box	PCB	Tank or Truck	TS
Electricity Transmission Line	ETL	Police Telephone Pillar	PTP	Telephone Call Box	TCB
Fire Alarm Pillar	FAP	Post Office	PO	Traverse Station	TS
Flagstaff	FS	Public Convenience	PC	Water Point, or Tap	WP, WPT
Foot Bridge	FB	Public House	PH	Weighbridge	WB
Fundamental Bench Mark	FBM	Pump	P	Well	W
Guide Post	GP	Mean High or Low Water	MHW or MLW	Wind Pump	WP
				Mean High or Low Water Springs	MHWS or MLWS

PARCEL NUMBERS AND ACREAGES
The number and acreage of each parcel of land is shown within the parcel. It is important when identifying a parcel to specify the number(s) of the plan(s) on which it falls.
IN PARCELS DIVIDED BY THE SHEET EDGE, THE ACREAGES ARE SHOWN TO SHEET EDGE ONLY.
To convert acres to hectares multiply by 0.404686
To convert hectares to acres multiply by 2.471054